

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS IIN-D350-636 REV. F OR EARLIER

REF. FAA STC: SR00646SE

REF. TCCA STC: SH99-7

REF. CAA AIRWORTHINESS APPROVAL NOTE: 28081, 28082

The D350-636-105A/B Wedge Kits can be installed on D350-636-011/-012/-013/-014 Skidtube installations to help prevent the D2741 blade from getting snagged on objects on the ground during take-off. The D350-636-105A Wedge Kit is compatible with Apical Float Systems per STC SR00470LA, SR00645LA and SR00831LA with the low angle float extensions but is not compatible with OEM skid tubes. The D350-636-105B Wedge Kit is compatible with non-float tube equipped skid tubes but is not compatible with OEM skid tubes.

The D350-636-105A/B Wedge kits are installed as follows:

- 1) Remove the D2741 blades from the D350-636 skidtube assemblies
- 2) Drill 2x $\varnothing 0.201$ (#7 drill) per D2741 blade as shown in Figure 1 Sheet 2 and deburr
- 3) Countersink the 2 holes $\varnothing 0.385 \times 100^\circ$ from the bottom of each D2741 blade
- 4) Position the D3926-1/-3 wedge on the top side of each D2741 blade centered between the left and right sides
- 5) Transfer drill 2x $\varnothing 0.201$ (#7 drill) from each D2741 blade to the D3926-1/-3 wedge and deburr
- 6) Touch up holes in D2741 blade with primer per Aircraft Maintenance Manual
- 7) Install the D3926-1 wedge on each D2741 blade using the hardware shown in Figure 2 Sheet 2
- 8) Install the D3926-3 wedge on each D2741 blade using the hardware shown in Figure 3 Sheet 3
- 9) Re-install the D2741 blade onto the D350-636 skidtube assembly in accordance with IIN-D350-636.
- 10) It is acceptable to install blade tape (abrasion strip material) on the float tube extension to prevent wear between the D3926-1 wedge and the float tube extension.

WEIGHT AND BALANCE

Installation	Weight	Lateral		Longitudinal	
		Arm	Moment	Arm	Moment
D350-636-105A Wedge Kit	0.50 lb 0.23 kg	0.0 in 0.0 m	0.0 in-lb 0.0 m-kg	178.25 in 4.53 m	89.13 in-lb 1.04 m-kg
D350-636-105B Wedge Kit	0.50 lb 0.23 kg	0.0 in 0.0 m	0.0 in-lb 0.0 m-kg	178.25 in 4.53 m	89.13 in-lb 1.04 m-kg

PARTS LIST

QTY. -105A	QTY. -105B	PART NUMBER	DESCRIPTION
X		D350-636-105A	Wedge Kit
	X	D350-636-105B	Wedge Kit
2		D3926-1	WEDGE
	2	D3926-3	WEDGE
4	4	MS21042L3	NUT
4	4	MS24693S276	SCREW
4	4	NAS1149D0363J	WASHER

A	NEW ISSUE		09.07.23
REV.	DESCRIPTION	BY	DATE
DESIGN		DART AEROSPACE USA, INC. PORT HADLOCK, WA	
DRAWN			
CHECKED	ASS	DRAWING NO. REV. A	
MFG. APPR.	N/A	DSI 9456 SHEET 1 OF 3	
APPROVED		TITLE SCALE	
DE APPR.		WEDGE KIT NTS	
DATE	09.07.23	COPYRIGHT © 2009 BY DART AEROSPACE USA, INC. <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

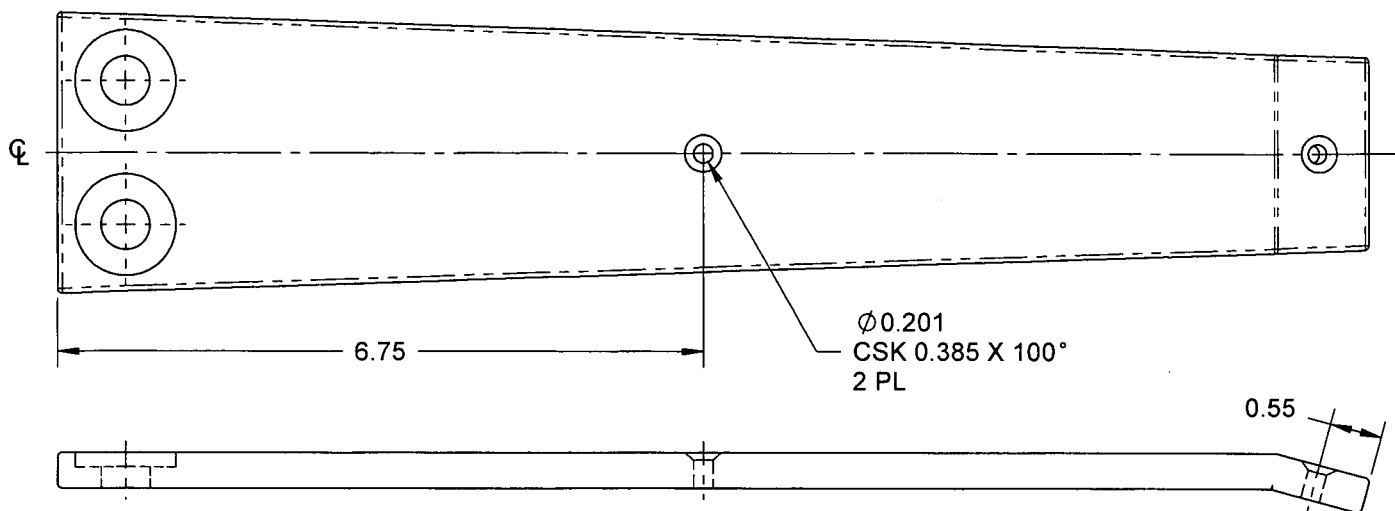


FIGURE 1: D2741 BLADE DRILLING DETAIL

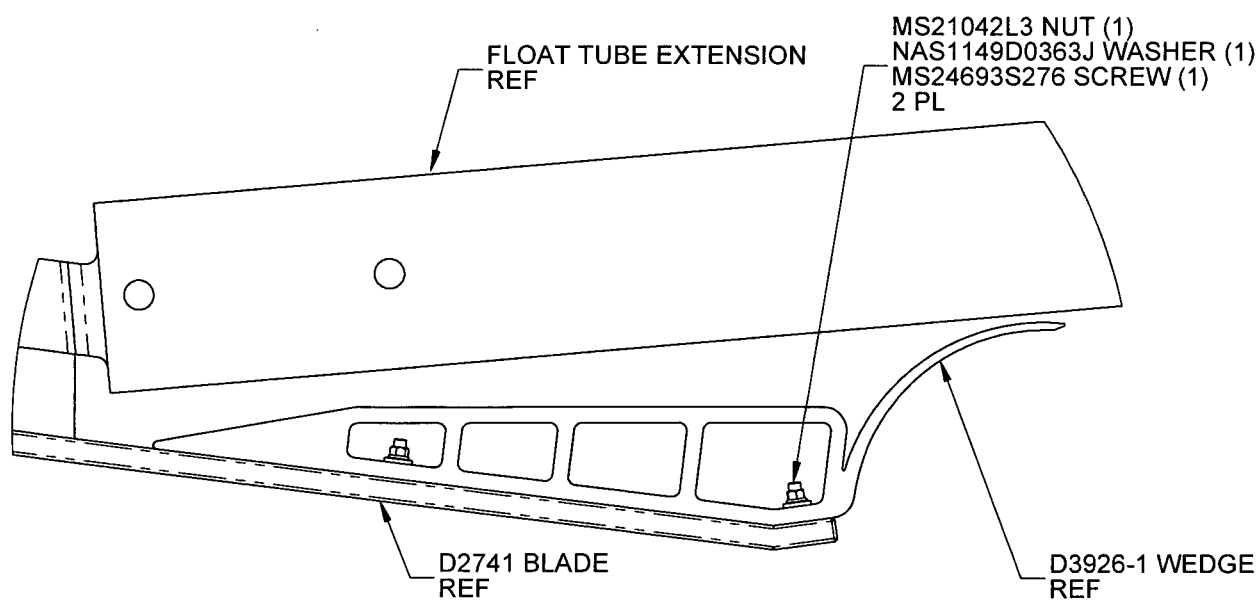


FIGURE 2: D3926-1 WEDGE INSTALLATION

DESIGN	<i>AS</i>	DART AEROSPACE USA, INC. PORT HADLOCK, WA	
DRAWN	<i>AS</i>		
CHECKED	<i>ASS</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9456	SHEET 2 OF 3
APPROVED	<i>NO</i>	TITLE	SCALE
DE APPR.	<i>TH</i>	WEDGE KIT	NTS
DATE	09.07.23	COPYRIGHT © 2009 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

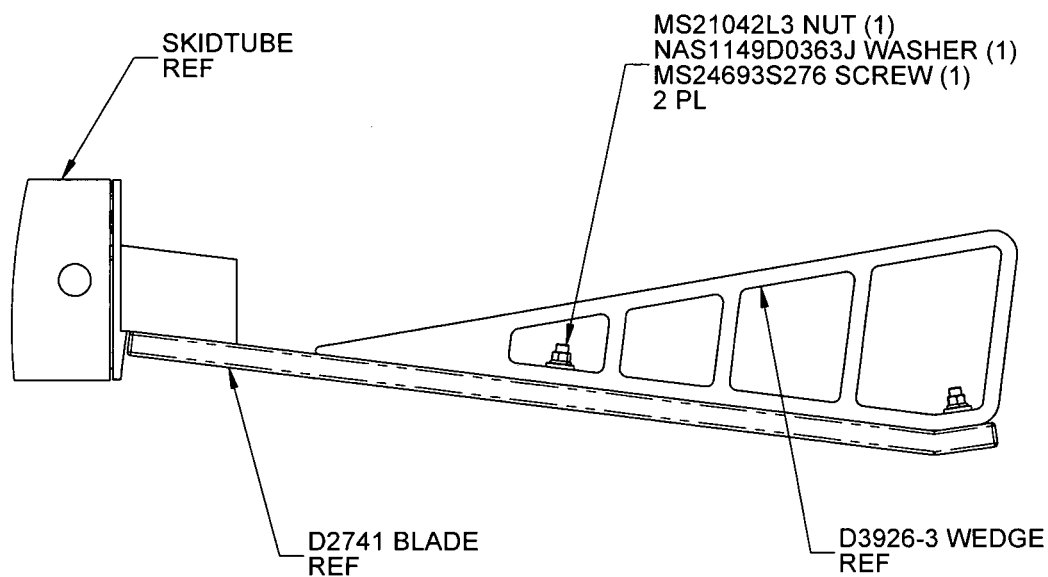


FIGURE 3: D3926-3 WEDGE INSTALLATION

DESIGN	<i>[Signature]</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	<i>[Signature]</i>		
CHECKED	<i>ASS</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9456	SHEET 3 OF 3
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	WEDGE KIT	NTS
DATE	09.07.23	COPYRIGHT © 2009 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	